


Methylene Chloride


CH₂Cl₂

No.138L

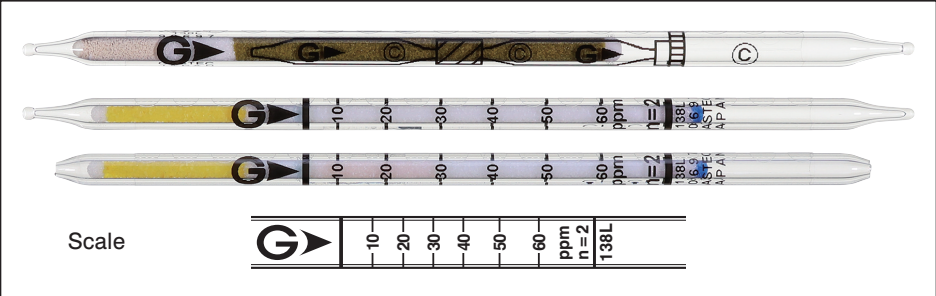

Performance	When used, these tubes are to be connected.		
Measuring range	4 to 10 ppm	10 to 60 ppm	60 to 150 ppm
Number of pump strokes	4 (400 mL)	2 (200 mL)	1 (100 mL)
Correction factor	0.4	1	2.5
Sampling time	12 min	6 min	3 min
Detecting limit :	3 ppm (4 pump strokes)		
Colour change :	White → Pale pink		
Operating conditions :	Temperature 0 to 40 °C (32 to 104 °F) correction used		
	Relative humidity 0 to 90 % correction not used		
Relative standard deviation :	15 % (for 10 to 20 ppm) , 10 % (for 20 to 60 ppm)		
Tube quantity and number of tests per box :	10 tubes for 5 tests		
Shelf life :	24 months		

Reaction principle



Possible coexisting substances and their interferences

Substance	Concentration	Interference	Changes colour by itself to
Chlorine, Bromine, Iodine		+	Pale pink
Unsaturated halogenated HCs	≥ 6 ppm	+	Pale pink
Saturated halogenated HCs	≥ 3 ppm	+	Pale pink

Calibration gas generation

Diffusion tube method