


Methacrylonitrile

CH₂:C(CH₃)CN

No.192

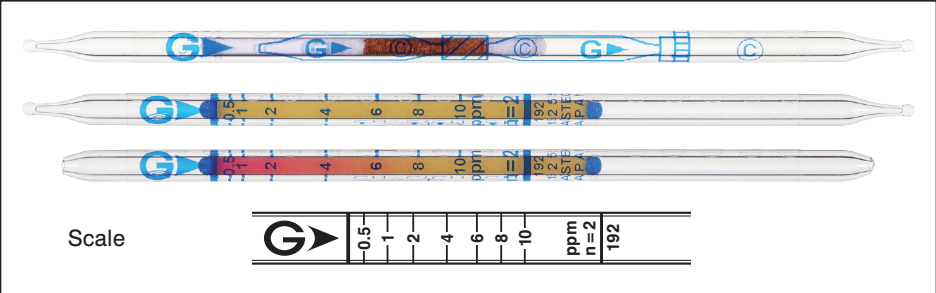

Performance

When used, these tubes are to be connected.

Measuring range	0.2 to 0.5 ppm	0.5 to 10 ppm	10 to 22 ppm
Number of pump strokes	4 (400 mL)	2 (200 mL)	1 (100 mL)
Correction factor	0.4	1	2.2
Sampling time	8 min	4 min	2 min

Detecting limit :0.1 ppm (4 pump strokes)

Colour change :Yellow → Red


Operating conditions :Temperature 0 to 40 °C (32 to 104 °F) correction not used
Relative humidity 0 to 90 % correction not used

Relative standard deviation :10 % (for 0.5 to 10 ppm)

Tube quantity and number of tests per box :10 tubes for 5 tests

Shelf life :36 months

Reaction principle



Possible coexisting substances and their interferences

Substance	Concentration	Interference	Changes colour by itself to
Acetone cyanohydrin		+	} Red
Nitriles (≥ C ₃)		+	
Alcohols, Esters, Ketones	≥ 20 ppm	—	} No
Aromatic hydrocarbons	≥ 20 ppm	—	

Chlorine, hydrogen chloride, hydrogen cyanide, nitric acid and water vapour are trapped in the white layer of the pretreatment tube.

Calibration gas generation

Diffusion tube method